



## Recommendation to measure

- VENETIAN BLIND



## Width of the curtain

In a window with space on the sides is recommended to add **8 cm** on each side of the woodwork.

If there is a tape blind or a button we could also make the biggest curtain to cover them.





## Curtain width no room on the side

In a window without margin between the side wall and the window is convenient to take the measurement from the side wall to **8 cm** of the other end of the window.

If there is a tape blind or a button we could also make the biggest curtain to cover them.





## Two curtains for window

In a window where you want to put two curtains like the picture, take the measurement from the middle up to **8 cm** over the frame.





## Curtain width no room on the sides

In a window without margin between carpentry and sidewalls **discount the socket** on each side. In order to be climbing a ladder and take the extent the party will shade installed.





# Height curtain door

In a window that is not attached to the ceiling we can measure the retreat **redemption** it (brackets required) or to the ceiling. If the window handle protrudes we recommend you measure the ceiling so when installing curtain to separate it takes to save the lever.

At the height have to deduct 1cm or 2cm so that the curtains are off the ground.  
The **redemption** is the measure that makes up the curtain collection or folded.

**Redemption:** for venetian of 16-25-35mm

- height venetian of 100cm the redemption it will be of 7,5cm
- height venetian of 150cm the redemption it will be of 8,5cm
- height venetian of 200cm the redemption it will be of 9,5cm
- height venetian of 250cm the redemption it will be of 10,5cm

**Redemption:** for venetian of 50mm

- height venetian of 100cm the redemption it will be of 9,5cm
- height venetian of 150cm the redemption it will be of 11cm
- height venetian of 200cm the redemption it will be of 12cm
- height venetian of 250cm the redemption it will be of 13cm





# Height of the curtain on window

In a window that is not attached to the ceiling we can measure the **redeployment\*** curtain over the window or **to the ceiling**. If the window handle protrudes is recommended to measure up to the ceiling so when installing curtain to separate it takes to save the lever. We can also take the measure to the floor.




\*See high door curtain.



# Curtains in angle of 90 °

For measuring windows at 90 ° we have to deduct 9 cm to one of the two curtains, in this case we have granted to the **curtain B**.

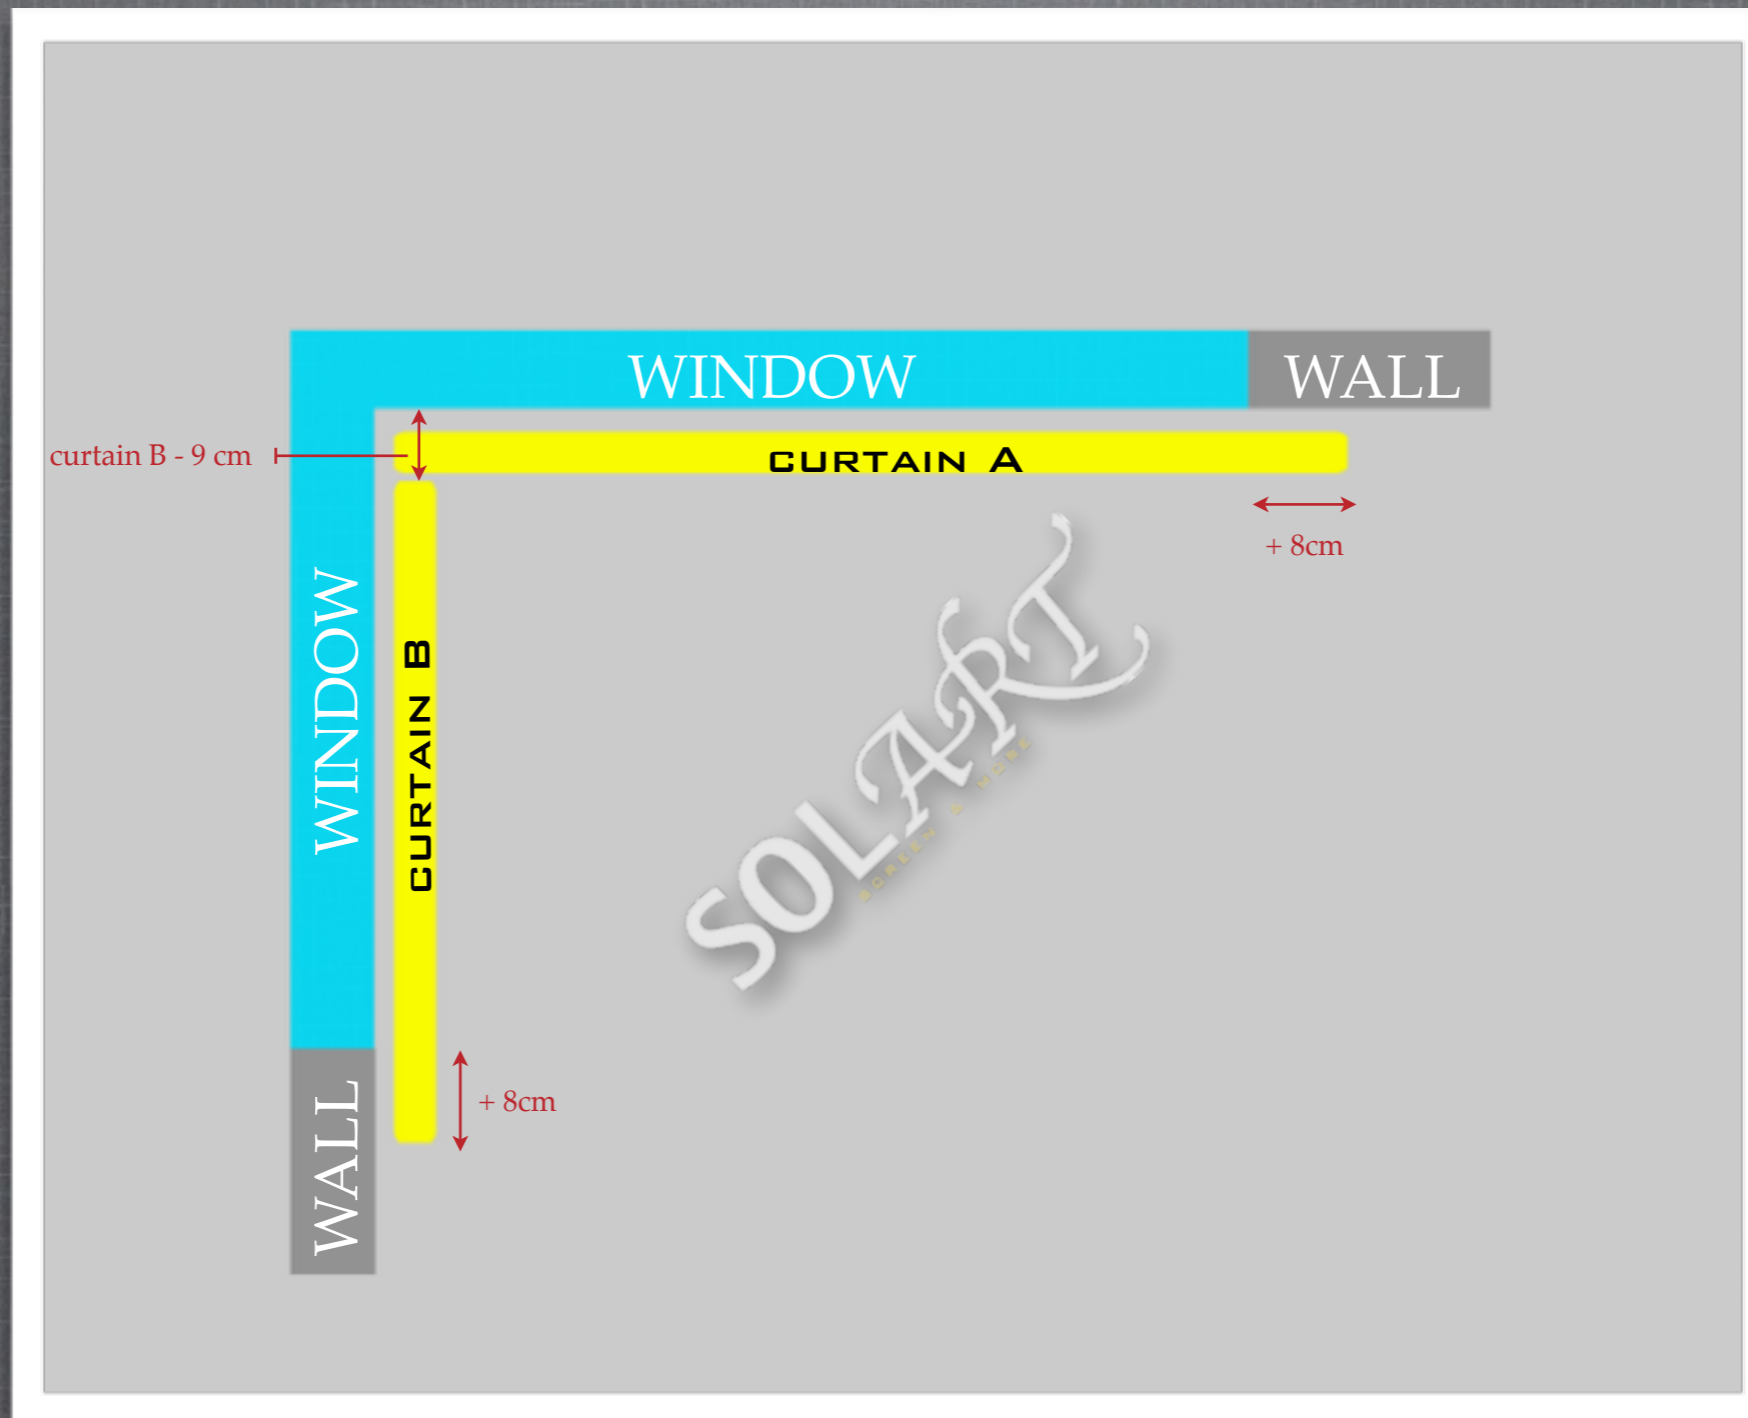





These measures are approximate, with these basic tips you can take steps as best fits the space you want to cover with curtains.

You can find more information at: [www.cortinas-solart.com](http://www.cortinas-solart.com)

For any question about measures you can contact us.

e-mail: [info@cortinas-solart.com](mailto:info@cortinas-solart.com)

Phone: 932 427 646

SOLART is a registered trademark, all rights reserved.